

ACCOPPIATORE PNEUMATICO



l'Accoppiatore Pneumatico viene utilizzato per un corretto centraggio e allineamento dei tubi.

La macchina può essere dotata per la sua traslazione con motori pneumatici a pistoncini ed equipaggiata per la saldatura manuale o per la saldatura automatica.



Il suo ciclo operativo viene eseguito con apposite valvole pneumatiche, comandate, a secondo della fase operativa, manualmente o a distanza con apposita asta di comando.



OPUS

OPUS s.r.l.

COSTRUZIONE E REVISIONE MACCHINE PER PIPELINE

26864 Ospedaletto Lodigiano (LO) - Via Strada Mantovana, 18

Tel. (0039) 0377 86811 - Fax (0039) 0377 86977

www.opus-srl.it - e-mail: info@opus-srl.it

PNEUMATIC INTERNAL CLAMP



The Pneumatic Clamp is used for a correct centering and alignment of pipes.

For the translation, the machine can be provided of axial piston air motor and equipped for manual or automatic welding system.

Its operational cycle is carried out with special pneumatic valves, that in production stage, are controlled manually or at a distance with an appropriate control rod.



OPUS

OPUS s.r.l.

COSTRUZIONE E REVISIONE MACCHINE PER PIPELINE

26864 Ospedaletto Lodigiano (LO) - Via Strada Mantovana, 18

Tel. (0039) 0377 86811 - Fax (0039) 0377 86977

www.opus-srl.it - e-mail: info@opus-srl.it